



Ultrasonic Cleaner BJC-1259

User Instruction Manual



■ **READ ALL INSTRUCTIONS**

BEFORE USING

■ **SAVE THESE INSTRUCTIONS**

SPECIFICATIONS:

| | | | |
|-----------|--------------------|---------------|---------------------|
| NAME | Ultrasonic Cleaner | POWER SUPPLY | AC 100-120 V, 60 Hz |
| ITEM No. | BJC-1259 | INPUT POWER | 35 W |
| DIM. | 20 x 12.5 x 4 cm | TIMER SETTING | 3 minutes |
| TANK SIZE | 600 ml | WT | 780 g |

The vibrating of washing liquid caused by Ultrasonic wave cleans off dust, smeary bits and dirt on the surface.

Features:
35watts of PURE
ULTRASONIC Power
42,000 cycle energy wave
quiet, solid state circuitry
3 minutes auto shut off

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING



 
 

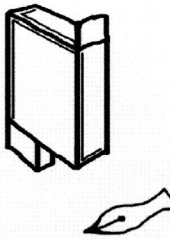 
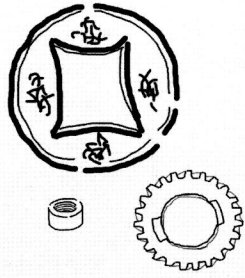 
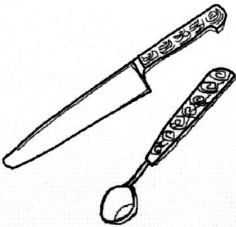 
DANGER—To reduce the risk of electrocution:


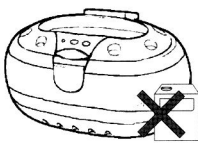 
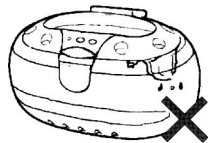 
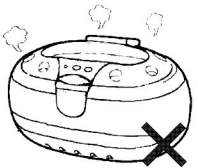 
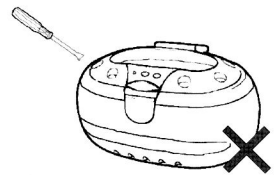 
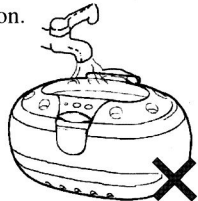 
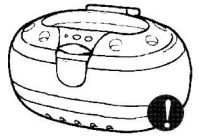 
1. Always unplug this product immediately after using.
2. Do not use while bathing.
3. Do not place or store product where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for a product that has fallen into water. Unplug immediately.
6. The product may be off or can't be switched off when it is subjected to electromagnetic interference like Fast Transients or Surge voltage, but it can recover after being re-plugged in the socket, and then just follow the instruction described in this manual to set the function again for normal operation.




WARNING—To reduce the risk of burns, electrocution, fire, or injury to persons.

1. A product should never be left unattended when plugged in.
2. Close supervision is necessary when this product is used by, on, or near children or invalids.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. never operate this product if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service centre for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.
8. This appliance is not intended for used by persons (including) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
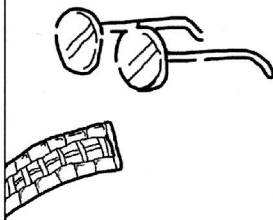
| APPLIED USES | | |
|---|--|---|
| Jewelry Decorations | Opticals & Watch chains | Commodities |
|  |  |  |
| Necklaces, Fingers, Earrings, Bracelets, etc. | Glasses, Sun-glasses, Watch chains, Waterproof watches, etc. | Electric shaver heads, Razor blades, Dentures, Combs, Toothbrushes,etc. |
| Stationery | Metal Articles | Dining Appliances |
|  |  |  |
| Pen-heads, Printer-heads, Signature chops, etc. | Watch Parts, Ancient coins, Badges, Valves, Machine nozzles,etc. | Slots and lines of dishware handles,etc. |

|  CAUTION | |
|--|---|
| Do not clean the unit with organical solvents, diluents, abrasives.  | Do not add too much water. Never let water overflow.  |
| Before cleaning, filling with water is a must, otherwise the unit may be damaged.  | Do not dissect the unit except the authorized serviceman.  |
| Prohibit washing the complete unit with water, to reduce the risk of electrocution.  | Repeat working cycle can enhance the cleaning effect. While the interval is better longer than 5 minutes.  |
| The product may be off or can't be switched off when it is subjected to electromagnetic interference like Fast Transients or Surge voltage, but it can recover after being re-plugged in the socket, and then just follow the instruction described in this manual to set the function again for normal operation. | |
| Unfirmly inlaid studs on decorations may shed off during cleaning. | |
| Unfastened parts may also meet above problem. | |
| Do not merge non-waterproof watch into water. | |

 Product Drawing&Indication

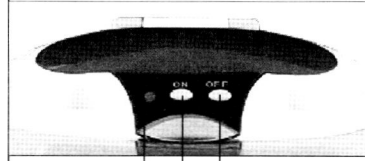

OFF

ON

Working Indication Light
(When working, red light on)

Power Indication Light
(When powered, blue light on)

Supervision Window

Upper Cover

 
Outer Shell

Stainless Steel Tank


Circuit Board

Transducer

Power Plug&Cord

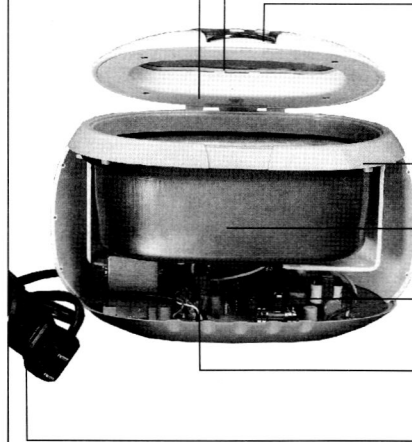


OPERATION GUIDANCE

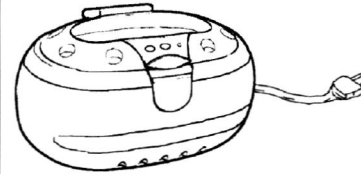 

1. Open the upper cover, put the article into the tank, then fill with water. (The water should merge the article but not exceed the ruling mark.)

 Running without water can damage the unit!

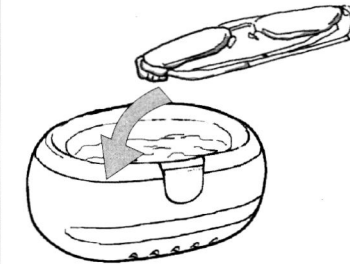

2. Close the cover. Connect the unit with power. The Power Indication Light (Blue) on the inner cover will be on.
3. Press ON to start cleaning and the Working Indication Light (Red) on the upper cover will be on.

During cleaning, the "ZiZi" noise is normal, which comes from tank working.

 


4. After 3 minutes, the cleaning automatically stops and the Red light turns off. Or press OFF to stop. For another cleaning cycle, just repeat above process.
5. When cleaning is over, cut off the power. Open the cover, take the cleaned article out and drain the water.

CLEANING METHODS:

Three cleaning methods (in different situations)

General Cleaning

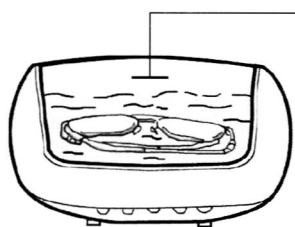

Ruling mark

 
Use just tap water for general cleaning. (The water should merge the article but not exceed the ruling mark.)

Enhanced Cleaning




For professional use (jewelers, opticians, dental labs, dentists, artists etc.) Use special cleaning liquid. For smears, add a few drops of detergent into water to enhance cleaning.

Partly Cleaning

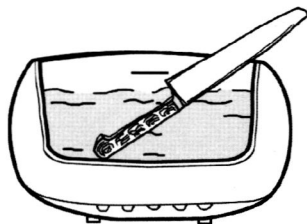

For large articles, partly cleaning as shown.

 USER MAINTENANCE

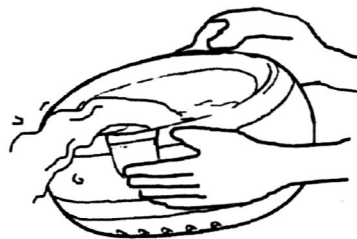


1. Do not leave the cleaned item in the cleaning. Container when pouring

2. Before draining the water, unplug the unit.

3. Do not leave water stay in the cleaning container. Empty immediately after each use.

4. Wipe the tank with towel.

 Prohibit washing the complete unit with water to reduce the risk of electrocution.

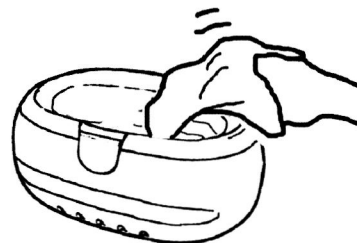

5. Keep cool and dry.

6. Any repair should be performed by authorized service centers in our Guarantee Book.

